

Cotton Candy



Operating the Cotton Candy

***** FOR SAFETY REASONS, CHILDREN SHOULD NOT OPERATE THIS MACHINE. *****

1. Do not leave the cotton candy unattended while the machine is in use.
2. Set the plastic tub on top of the candy machine.
3. With a wet cloth OR a spray bottle filled with water only, wet the inside of the plastic tub. This will help to keep the floss inside the tub and reduce the amount of floss that flies in the air.
4. Pour the flossugar into the top of the cotton candy machine (or the head of the cotton candy machine). Always fill it 90% full with the flossugar. Level the sugar in the head of the cotton candy machine so it is even.
5. NEVER ADD SUGAR WHEN MOTOR IS RUNNING!
6. Turn main switch and heat on
7. Turn heat control knob clockwise to maximum setting to initiate the fastest possible warm up.
8. The machine should start making floss in a few seconds. When the unit starts making floss, you must reduce the heat setting (usually to medium).
9. As the floss begins to accumulate, take a cotton candy cone and, in a clockwise motion, roll the floss onto the cone.
10. When the machine stops making floss, TURN THE MOTOR AND THE HEAT OFF.
11. If you want to continue making cotton candy, repeat steps starting at item 3.
12. You MUST finish making all the sugar that is inside the cotton candy head before stopping.

Cleaning the Cotton Candy Machine

***** THIS MACHINE MUST BE RETURNED CLEAN OR THERE WILL BE A \$50 CLEANING CHARGE *****

1. To clean, run machine until it stops making candy.
2. When the machine has stopped making floss, turn the heat to the highest position for approximately one minute to "clean" the band by baking off the remaining sugar. NEVER put water in the floss head.
3. Remove the white plastic tub from the top of the cotton candy machine.
4. Wipe down the entire tub, inside and outside with a damp cloth.
5. Gently wipe down the machine with a damp cloth.