

Popcorn Machine



Operating the Popcorn Machine

***** FOR SAFETY REASONS, CHILDREN SHOULD NOT OPERATE THIS MACHINE. *****

1. Do not leave machine unattended while in use
2. Turn kettle heat and kettle motor switch on.
3. Load one pre-measured EZ pouch of popcorn and one pre-measured easy pouch of oil to the kettle.
4. Do not lift kettle lid after popcorn is placed in the kettle
5. When corn looks like it has finished popping, dump kettle into the popcorn machine. If you wait too long to dump the kettle, the remaining popcorn in the kettle will burn.
6. Repeat cycle starting at item 3.
7. Turn off kettle heat and kettle motor when finished making popcorn
8. If you would like the popcorn to keep warm, turn on the heat light switch.

Cleaning the Popcorn Machine

***** THIS MACHINE MUST BE RETURNED CLEAN OR THERE WILL BE A \$50 CLEANING CHARGE *****

1. Remove all popcorn from the kettle, the bottom of the machine, and the granny tray underneath.
2. Clean the kettle, inside popcorn area, the exterior, and the granny tray (basically the entire machine) with a damp cloth only. The outside part of the kettle should be wiped with a dry cloth after using a damp cloth.