

Sno Cone Machine



Operating the Sno Cone Machine

***** FOR SAFETY REASONS, CHILDREN SHOULD NOT OPERATE THIS MACHINE. *****

1. Do not leave machine unattended while in use
2. Fill the hopper within an inch of the top with ice cubes or block ice (no thicker than 3" to 4").
3. Turn the switch to the on position.
4. While pressing the red button above the on switch, apply downward pressure to the pusher handle. Apply firm and even pressure to make the best snow. Applying too much pressure will result in snow that is coarse, applying too little pressure will make the snow mushy.
5. Use the provided scooper to scoop the ice into the paper cones.
6. Flavor with syrups by using the provided syrup pump.
7. DO NOT THROW AWAY SYRUP PUMP WHEN DONE WITH SYRUP.

Cleaning the Sno Cone Machine

***** THIS MACHINE MUST BE RETURNED CLEAN OR THERE WILL BE A \$50 CLEANING CHARGE *****

1. Remove all ice and slush from the machine.
2. Wipe entire machine with a damp cloth.
3. DO NOT THROW AWAY SYRUP PUMP WHEN DONE WITH SYRUP.